



[www.classicconsoles.com](http://www.classicconsoles.com)

## Installation instruction for your new 1973-1981 Camaro and 1973-1981 Firebird Replacement HOLDSTER™ armrest

Tools needed:

- a) Safety Glasses
- b) Phillips screw driver
- c) Box cutter or shears
- d) Portable drill and 1/8" drill bit



**NOTE,** you *do not* have to remove console from vehicle

- 1) Remove factory armrest and storage compartment from console body by removing (2) small screws in bottom of storage compartment.--- see Illustration # 1
- 2) Cut away factory lid from storage bin (if still attached) by cutting through plastic factory hinge by using either shears or box cutter. (Illustration # 2)

**Now its time to install the new 7381 Holdster™ armrest**

- 3) Note, your new 7381 Holdster™ armrest has a nickel plated metal hinge pre-installed on a black PVC block. See Illustration # 3
- 4) Remove 2 screws from the black PVC block. Illustration # 4
- 5) *Using hinge* transfer hole location from hinge to back edge of console body using black felt marker or pencil. See Illustration # 5
- 6) Pre- drill your marked hole location with 1/8" drill bit in your factory console.
- 7) Note black PVC block with two predrilled screw holes. Illustration # 6
- 8) Place black PVC block **INSIDE** rear area of factory console with predrilled holes "UP" Illustration # 7
- 9) Hold new Holdster™ armrest on top of console aligning hinge holes with holes you predrilled in console. Illustration # 8
- 10) Now you are ready to re-install the factory storage bin , using the 2 screws you remove in step 1 Illustration # 9

**You are now ready to cruise with your new Holdster™ armrest!**  
**Questions ? Please call our tech support at 1-229-377-6240**



**Illustration # 1**




**Illustration # 2**



**Illustration # 3**



**Illustration # 4**

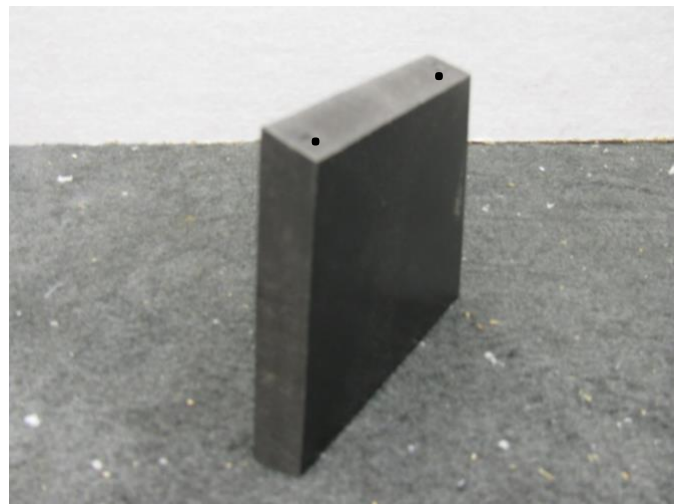

**Illustration # 5**



**Illustration # 6**



**Illustration # 7**



**Illustration # 8**

**Finished installation of the 7381 Holdster™ Armrest**



**Illustration # 9**

